

VeloCore 22: How do I adjust the tilt of my console?

ID: 11864.1

Follow this troubleshooting guide to help resolve consoles being tilted on the VeloCore 22 bike.

Some common complaints may include:

- Console is tilted
- Console isn't straight

Follow these steps to troubleshoot the issue

Tools you may need:

Phillips head screwdriver
6mm hex/Allen wrench, or the wrench from the hardware card included with your machine

1. Using a 6mm Allen wrench, loosen the lower mast bolts and adjust the mast until the console is completely straight.
2. Retighten the lower mast bolts when completed [\[11864.B\]](#).

Need additional assistance?

1 Contact Tech Team / Advanced Troubleshooting

If the issue was not resolved in the steps listed, contact the Tech Team or send an Advanced Troubleshooting case.

Submit a Case with case type [Advanced Troubleshooting](#)