

# Schwinn 490 Elliptical: Console constantly cycles through program screens

ID: 15337.1

## Common issue descriptions:

- Console demo mode
- Machine behaves or acts like a floor/display model
- Console won't stop cycling through program screens
- Can't select or start a workout

**Tools used in this guide:** - None -

**Estimated time to complete:** Less than 5 minutes

**Let's get started!** We will check the components below to determine which is causing the issue.

1. [Schwinn logo on the console](#)

## Turn off Console Demonstration mode

<i>Tools Required:</i>	<i>Estimated Time to Complete:</i>
None	Less than 5 minutes

1. Console Demonstration mode is enabled when the console continuously cycles through programs and does not allow you to begin a workout.
2. To exit Demonstration mode, press and hold the Schwinn™ logo button for three seconds.
3. The settings will update the next time the machine goes to sleep [\[15337.A\]](#).



## Need additional assistance?

### 1 Contact Tech Team / Advanced Troubleshooting

**If the issue was not resolved in the steps listed, contact the Tech Team or send an Advanced Troubleshooting case.**

**Submit a Case with case type Advanced Troubleshooting**