Results Series BXT116 Treadmill: How do I clear a stuck button error code? ID: 12210.1

Follow this troubleshooting guide to help resolve issues with stuck buttons on the Results Series BXT116 Treadmill.

Some common complaints may include:

- Stuck button error code
- Stuck button message on console

Follow these steps to troubleshoot the issue

- 1. Turn your treadmill off and turn it back on. Wait for your treadmill to boot up. Watch the console and see if the stuck button error code returns [12210.A].
- 2. If the error code returns, press every button on your console one at a time [12210.B].
- 3. If the issue persists, order a Console [12210.C].

Need to order replacement parts?

1 Customer Care Contact Information

Please contact Customer Care at 1-800-605-3369 for additional help or to order replacement parts. Some replacement parts may also be available for purchase <u>online here</u>.

A list of part numbers referenced within this guide can be located at the bottom of this page.

Customer Care - Hours of Operation:

Monday - Friday 6:00am - 5:00pm PST

The replacement part will be provided to you at no cost assuming your machine meets the warranty eligibility requirements. A Customer Care Agent will be able to assess your current warranty eligibility and provide you with your options.

Please note that if you did not purchase your machine directly from BowFlex, Schwinn, or Nautilus, we will need a copy of your purchase receipt in order to register your machine for warranty.

2 Parts Reference Table

Part Description	Part SKU
Console	8009851

3 EAF Policy

EAF - Issues requiring Special Handling

about:blank 1/3

ATTENTION: If the customer complains of any of the following, transfer the call to a Senior Rep in the **CS ESCALATION** queue.

• NOTE THE CUSTOMER FILE: "Transferred customer to Senior Rep/Sup due to escalated issue."

NOTE: This process is **ONLY** for Treadmills and TreadClimbers.

NOTE: This does not apply to second-hand purchases or unsupported products. The customer record must have a valid POP and serial number.

*Visible Smoke coming from machine:

- Be sure to confirm specific color of smoke (blue, black, or white).
- NOTE: If complaint is a hot/smoky odor/smell, proceed with troubleshooting.

*Sparks or flames coming from their machine outside of the drive motor

• (sparks from the brushes inside the drive motor are normal)

*Machine accelerates quickly (runs away) without user input/keypress

*Belt moves without safety key in place

*Strong Continuous Electric shock from machine frame (beyond normal static shock, which is a single defined event and builds up prior to discharge)

*Belt stops suddenly without an error code, without user input, or the safety key being pulled. Console remains on or working.

4 Contact Tech Team / Advanced Troubleshooting (TM/TC)

If the issue was not resolved in the steps listed, contact the Tech Team or send an Advanced Troubleshooting case.

Submit a Case with case type **Advanced Troubleshooting**

<u>Use these procedures as needed to gather more information to create the case:</u>

Results Series Treadmills Procedures

Treadmill 7 Procedures

Treadmill 10 Procedures

about:blank 2/3

Treadmill 22 Procedures

MY14/17 Treadmill Procedures

about:blank 3/3