

Schwinn 470: Why is there no power to my machine or console? ID: 12825.1

Follow this troubleshooting guide to help resolve power issues on your Schwinn 470 Elliptical.

Some common complaints may include:

- Console does not power on
- No power to elliptical
- Machine won't turn on
- Display is dark
- Console doesn't light up


Follow these steps to troubleshoot the issue

Tools you may need:

Phillips head screwdriver
Flathead screwdriver
(2) 6mm hex/Allen wrenches or the wrench from the hardware card included with your machine
Voltmeter

1. Inspect the power switch next to the power cord. Make sure that the switch is turned on and is glowing. If the switch is off, flip it to on and see if the issue persists [\[12825.A\]](#). If the switch does not glow, [order a Power Cord \[12825.B\]](#).
2. Unplug the power cord from both your machine and the wall outlet. Inspect the entire length of the cord for any damage or crimps. If undamaged, plug the power cord back in at both ends. Make sure it is securely connected. If damage is present, [order a Power Cord \[12825.C\]](#).
3. Check if the wall outlet is working properly. The power cord must be plugged directly into a 3-prong outlet without the use of extension cords. Plug another device into the outlet, such as a lamp, to see if it turns on. If it is not working, try again with a working outlet [\[12825.D\]](#).
4. Inspect the cables at the console. Use a Phillips head screwdriver to remove the 4 screws connecting the console to the mast and lift the console/handlebars up to expose the cables (**reference 1**). Disconnect and inspect the cables and connections coming from the console and the frame for damage, such as crimps, cuts, or bent pins. If the cables are undamaged, plug them back in, ensuring they are oriented in the correct direction, and retest your machine [\[12825.E\]](#). If the console is damaged, [order a Console \[12825.F\]](#). If the cable coming from the frame is damaged, [order an Upper Console Cable \[12825.G\]](#).

(Reference 1)

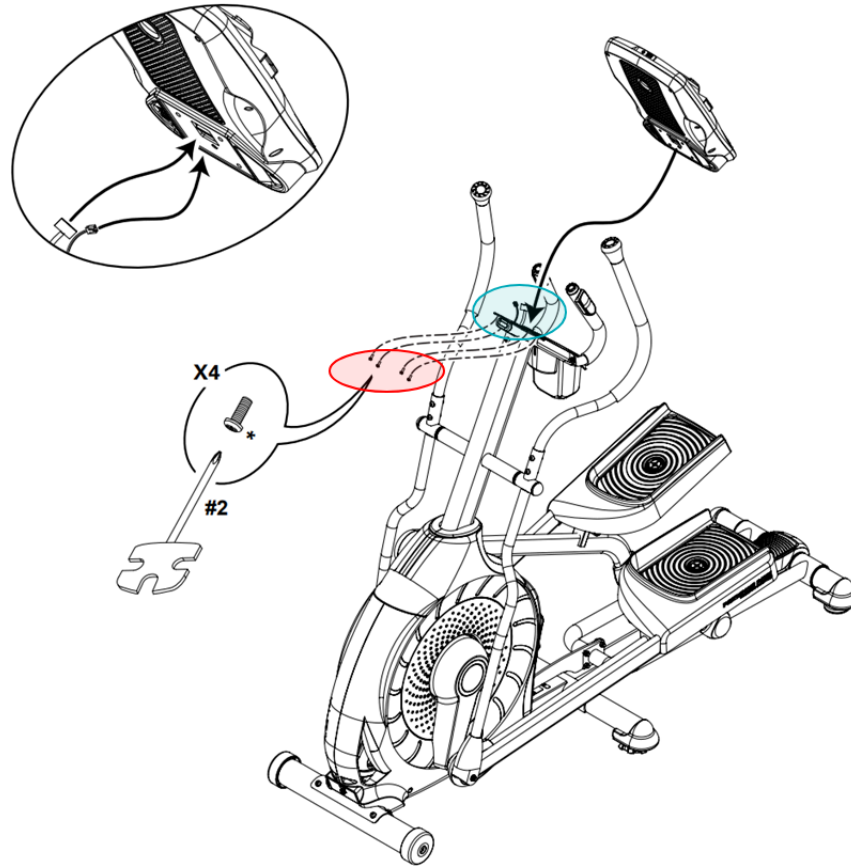

The bolts circled in red need to be removed to access the cables between the console and the console mast. Inspect the cables circled in teal for damage.

Need to order replacement parts?

1 Customer Care Contact Information

Please contact Customer Care at **1-800-605-3369** for additional help or to order replacement parts. Some replacement parts may also be available for purchase [online here](#). A list of part numbers referenced within this guide can be located at the bottom of this page.

Customer Care - Hours of Operation:
Monday - Friday 6:00am - 5:00pm PST

The replacement part will be provided to you at no cost assuming your machine meets the warranty eligibility requirements. A Customer Care Agent will be able to assess your current warranty eligibility and provide you with your options. Please note that if you did not purchase your machine directly from BowFlex, Schwinn, or Nautilus, we will need a copy of your purchase receipt in order to register your machine for warranty.

2 Parts Reference Table

Part Description	Part SKU
Console (2013 model)	8002118
Console (2017 model)	8011277

Mast Cable	8002693
Power Cord	8007982
Upper Console Cable	8002697

3 Contact Tech Team / Advanced Troubleshooting

If the issue was not resolved in the steps listed, contact the Tech Team or send an Advanced Troubleshooting case.

Submit a Case with case type Advanced Troubleshooting